

NRC Publications Archive Archives des publications du CNRC

Ice Regime Shipping System pictorial guide Timco, Garry; Johnston, Michelle

For the publisher's version, please access the DOI link below./ Pour consulter la version de l'éditeur, utilisez le lien DOI ci-dessous.

Publisher's version / Version de l'éditeur:

<https://doi.org/10.4224/12327589>

Transport Canada Report; no. TP14044E, 2003-01

NRC Publications Archive Record / Notice des Archives des publications du CNRC :

<https://nrc-publications.canada.ca/eng/view/object/?id=fb8ad082-802c-47bd-ba12-8462d0de456d>

<https://publications-cnrc.canada.ca/fra/voir/objet/?id=fb8ad082-802c-47bd-ba12-8462d0de456d>

Access and use of this website and the material on it are subject to the Terms and Conditions set forth at

<https://nrc-publications.canada.ca/eng/copyright>

READ THESE TERMS AND CONDITIONS CAREFULLY BEFORE USING THIS WEBSITE.

L'accès à ce site Web et l'utilisation de son contenu sont assujettis aux conditions présentées dans le site

<https://publications-cnrc.canada.ca/fra/droits>

LISEZ CES CONDITIONS ATTENTIVEMENT AVANT D'UTILISER CE SITE WEB.

Questions? Contact the NRC Publications Archive team at

PublicationsArchive-ArchivesPublications@nrc-cnrc.gc.ca. If you wish to email the authors directly, please see the first page of the publication for their contact information.

Vous avez des questions? Nous pouvons vous aider. Pour communiquer directement avec un auteur, consultez la première page de la revue dans laquelle son article a été publié afin de trouver ses coordonnées. Si vous n'arrivez pas à les repérer, communiquez avec nous à PublicationsArchive-ArchivesPublications@nrc-cnrc.gc.ca.

Arctic Ice Regime Shipping System Pictorial Guide



January 2003

This booklet was developed by Dr. Garry Timco and Dr. Michelle Johnston of the Canadian Hydraulics Centre, National Research Council of Canada. Support and funding for its development was provided by Transport Canada.

Photographs used in this booklet were provided by several individuals and organizations including Bob Gorman, Michelle Johnston, Garry Timco, the Canadian Coast Guard, and Fednav Limited. A number of the photographs were taken by Ice Service Specialists of the Canadian Ice Service.

January 2003

Preface

This book was developed as a reference guide for the Arctic Ice Regime Shipping System (AIRSS). It is a pictorial guide that outlines the four steps that are needed to apply the Ice Regime System. First, the user characterizes the Ice Regime. Second, the Class-dependent Ice Multipliers are obtained. Third, information about the Ice Regime and the Ice Multipliers is combined to determine the Ice Numeral. Finally, the Ice Numeral is used to decide whether the vessel should proceed or take an alternate route.

It is hoped that the information contained in the following pages will help the reader understand the Ice Regime System while providing a concise methodology for applying AIRSS.

For complete information regarding the regulatory requirements for ships operating in Canadian Arctic waters, please check the Transport Canada website www.tc.gc.ca. The last page of this booklet contains details about additional contacts.

Table of Contents

I. The Arctic Ice Regime Shipping System	1
Defining the Ice Regime Shipping System.....	2
What is an Ice Regime?	3
Why Use an Ice Regime System?	4
How the Ice Regime System Works	5
II. Ice Regimes	7
Characterizing the Ice Regime	8-9
Ice Concentration	10-13
Stages of Development	14-19
Stages of Decay	20-23
Ice Roughness	24
III. Ice Numerals	25
Vessel Classification	26-27
Ice Multipliers	28
Calculating the Ice Numeral	29
Table of Ice Multipliers.....	30
IV. Four Step Process: Summarized	31
How to Apply AIRSS	32-33
V. Detailed Examples for Each Vessel Class	35
Type E Vessels	36-37
Type D Vessels	38-39
Type C Vessels	40-41
Type B Vessels	42-43
Type A Vessels	44-45
CAC 4 Vessels	46-47
CAC 3 Vessels	48-49
CAC 2 & CAC 1 Vessels	50
VI. Calculated Examples of the Ice Numeral	51
Comparison of IN for Each Class.....	52-56
VII. Further Information	57

I. The Arctic Ice Regime Shipping System

Defining the Ice Regime System

Ice in the Arctic is a very complex and dynamic material. It has a wide range of thickness, concentration, age and roughness. Moreover, ice conditions in the Arctic change throughout the year.

There are a number of vessels that travel in Canada's Arctic, and it is important that their transit through the ice is a safe one. This is important for both personnel safety as well as preventing pollution in the Arctic.

How can this be done?

Transport Canada has implemented a Regulatory Standard that is intended to minimize the risk of pollution in the Arctic due to damage of vessels by ice. It is called **AIRSS**, for "**Arctic Ice Regime Shipping System**".

AIRSS combines information on the ice conditions and a ship's capability in ice to assess the potential for damage from the ice. It uses the concept of an "**Ice Regime**" to characterize the ice.

What is an Ice Regime?

An **Ice Regime** is a region of ice with more-or-less consistent ice conditions. From a navigation standpoint, it is an area in which there is the likelihood of impacting certain ice types, while maintaining a constant mode of navigation. Basically, the Ice Regime is the ice that the ship will likely encounter.

The Ice Regime takes into account several important factors of the ice -- concentration, thickness, age, state of decay, and roughness.



CCGS LOUIS S. ST-LAURENT

Why use an Ice Regime System?

Ice has caused significant damage to vessels in the Arctic. There have been over 200 reported damage events over the past 25 years. Approximately one-third of those events had the potential to cause pollution.

AIRSS is intended to minimize the risk of damage by taking into account the actual ice conditions that vessels sail through.



Damage caused by Ice

How the Ice Regime System Works

AIRSS takes into account a vessel's ability to travel safely in all types of ice conditions. Because different vessels have different capabilities in ice-covered waters, each vessel is assessed and assigned to a **Vessel Class**. This rating reflects the strength, displacement and power of the vessel. The relative risk of damage to a vessel by different types of ice is taken into account using "weighting" factors, called **Ice Multipliers**.

In the Ice Regime System, a simple calculation relates the strength of the ship to the danger presented by different ice regimes. The calculation gives an **Ice Numeral**. Ice regimes that are not likely to be hazardous have zero or "positive" Ice Numerals. Those regimes that could be dangerous have "negative" Ice Numerals. As always however, the safety of the ship is the responsibility of the Master.

The Ice Regime System can be applied using four steps.

- Step 1: Characterize the Ice Regime
- Step 2: Determine the Class-dependent Ice Multipliers
- Step 3: Calculate the Ice Numeral
- Step 4: Decide whether to proceed

These steps are discussed in the following pages.

II. Ice Regimes


Characterizing the Ice Regime

AIRSS relies upon accurately assessing the ice conditions. The Canadian Ice Service (CIS) issues Ice Charts to provide an overview of the ice conditions in different geographic regions. Ice Charts are produced using the most current available technology. They give an excellent indication of the general ice conditions in an area.

As such, Ice Charts are one of the most useful resources to provide a ship with an overview of the ice conditions in a certain area, in *advance* of when it is needed. That information can be used successfully for strategic planning. Ice Charts are also useful when the ship is confronted with difficult ice conditions, since the Charts can be used to determine alternate routes.


Although Ice Charts have an important role for vessels traversing ice-covered regions, their importance is, of course, no substitute for real-time observations made from the bridge. AIRSS relies upon up-to-date information that is obtained directly from the bridge and integrates that real-time information with the capability of each vessel class. In effect, this results in customized routing for each vessel, depending upon its ice-worthiness.

Characterizing the Ice Regime

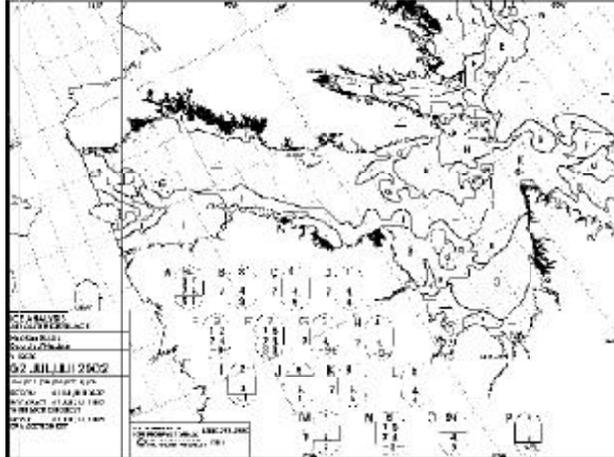

CIS Ice Chart


The primary factors used to define the Ice Regime are as follows:

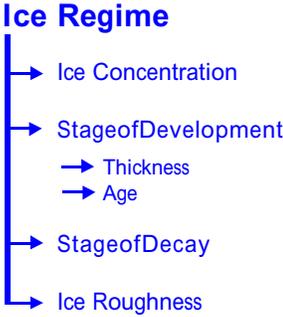


The next several pages illustrate the characteristics of sea ice that are used to define Ice Regimes.

Ice Concentration


Ice coverage in an area is determined by its total concentration, expressed in "tenths". AIRSS uses the partial concentration of each ice type in determining the Ice Numeral.

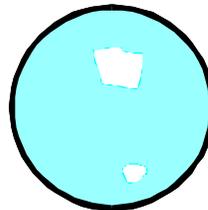


less than 1 tenth
open water

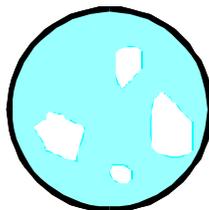


1 - 3 tenths
very opendrift

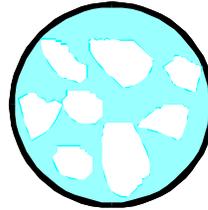


4 - 6 tenths
opendrift

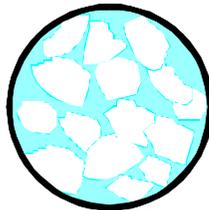


7 - 8 tenths
closepack/drift

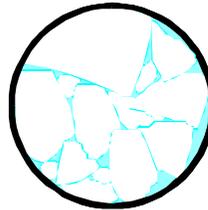

9 tenths
very closepack

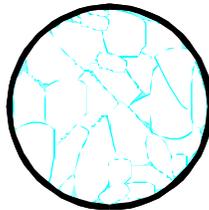


9+ tenths
very closepack

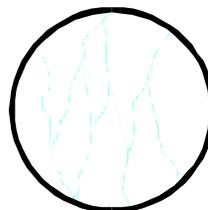

10 tenths
compact/ consolidated ice


Ice Concentration

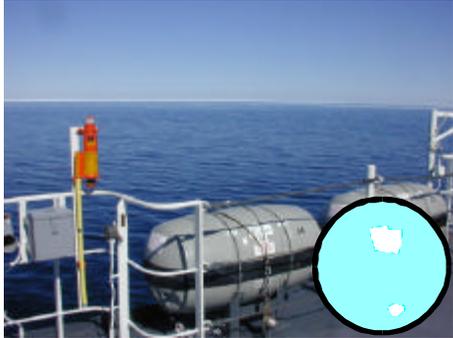

less than 1 tenth
open water



1 - 3 tenths
very open drift

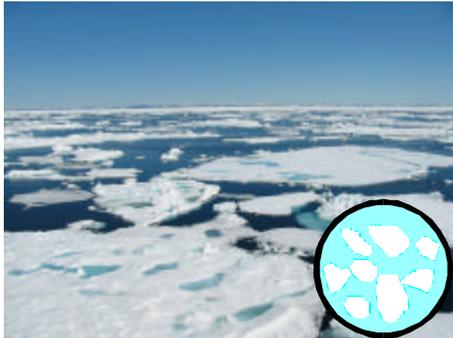

4 - 6 tenths
open drift

Ice Concentration




7 - 8 tenths
close pack/drift



9 tenths
very close pack

Ice Concentration

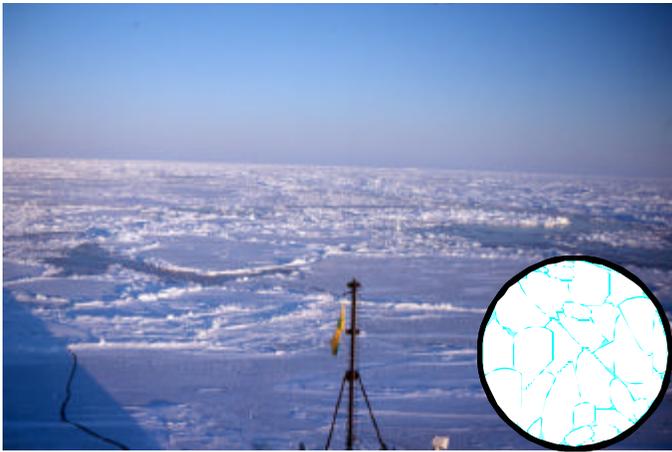

9+ tenths
very close pack



10 tenths
compact/consolidated ice

Stages of Development

Ice has the following **Stages of Development**:

New (N) (less than 10 cm thick)

Sea ice that is in early stages of formation. This ice is less than 10 cm thick and in small platelets or lumps, or ice in a soupy-looking layer. New ice is usually subdivided into frazil, grease ice, slush or shuga.

Nilas (NI) (less than 10 cm thick)

A thin elastic crust of floating ice that easily bends from waves and swells. It has a matted surface appearance.

Young Ice (YN) (10 to 30 cm thick)

Young ice is subdivided into the following sub-stages:

Grey (G) - Young ice, 10 to 15 cm thick, that is less elastic than Nilas. It often breaks from swells.

Grey-white (GW) - Young ice, 15 to 30 cm thick.

Thin First-year Ice (FY) (30 to 70 cm thick)

Sea ice that grows from Young Ice and is 30 to 70 cm thick. This is separated into *stage 1* (30 to 50 cm thick) and *stage 2* (50 to 70 cm thick).

Medium First-year Ice (MFY) (70 to 120 cm thick)

Sea ice that is 70 to 120 cm thick.

Thick First-year Ice (TFY) (> 120 cm thick)

Sea ice that is greater than 120 cm (1.2 m) thick.

Second-year Ice (SY)

Sea ice that has survived one melt season. It stands higher out of the water than first-year ice. Summer melting has often smoothed and rounded it. Melt water puddles in the summer are often greenish-blue.

Multi-year Ice (MY)

Sea ice that has survived more than one melt season. This ice can be more than 3 m thick and is very strong. It has a characteristic bluish colour and usually has a higher freeboard than first-year ice. It usually has a weathered, undulating surface.

Glacial Ice

Ice that has originated from a glacier that calved into the sea.

Stages of Development



New (N)

First-year sea ice, small floes less than 10 cm thick



Nilas (NI)

First-year sea ice sheet less than 10 cm thick

Stages of Development



Grey Ice (G)

First-year ice that is 10 to 15 cm thick



Grey-white Ice (GW)


First-year ice that is 15 to 30 cm thick

Stages of Development



Thin First-year Ice (FY)

First-year ice that is 30 to 70 cm thick

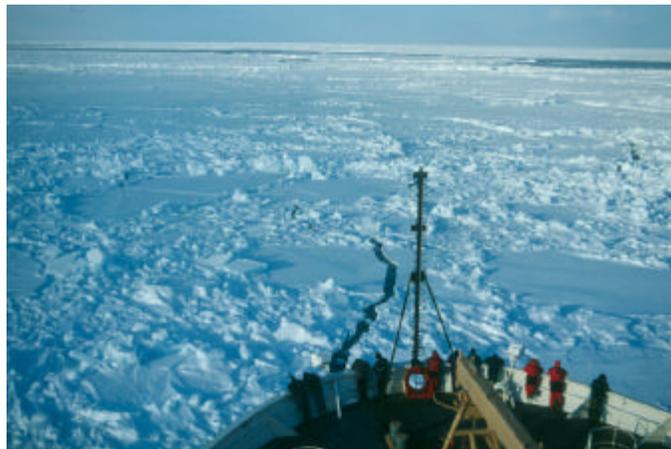

Medium First-year Ice (MFY)

First-year ice that is 70 to 120 cm thick

Stages of Development



Thick First-year Ice (TFY)

First-year ice that is greater than 120 cm thick



Second-year Ice (SY)

Sea ice that has survived one melt season

Stages of Development



Multi-year Ice (MY)

Sea ice that has survived more than one melt season



Glacial Ice

Ice of glacial origin

Stages of Decay

During the spring, the sea ice begins to melt and decay, with a resultant decrease in strength. The **Stages of Decay** of sea ice are:

- o No Melt (winter)
- o Snow Melt
- o Ponding
- o Thaw Holes (drainage)
- o Rotten

The Regulatory Standard of AIRSS takes into account the Stage of Decay by adding a value of + 1 to the Ice Multiplier for the ice type that has Thaw Holes (and is in the process of draining) or is Rotten. This bonus can be applied to multi-year ice, second-year ice, thick first-year ice or medium first-year ice. Great caution should be exercised if applying a decay factor to multi-year ice, as this type of ice is responsible for the majority of ship damage events in the Arctic.

Recent research has provided new insight on the decay of sea ice. The Canadian Ice Service, with assistance from the Canadian Hydraulics Centre, is developing weekly Ice Strength Charts for the Canadian Arctic. The charts will provide information on the Stage of Decay (or ice strength) of level, first-year ice.

The photographs on the following pages can be used as a guide to the application of the decay bonus.

Stages of Decay



Snow Melt



Ponding

Stages of Decay



Thaw Holes

Add +1 to the Ice Multipliers for MY, SY, TFY and MFY ice



Rotten

Add +1 to the Ice Multipliers for MY, SY, TFY and MFY ice

Ice Roughness

AIRSS also takes into account the **Ice Roughness**. If the ice regime has an overall concentration of 6-tenths or greater and more than one-third of an ice type is deformed by ridges, rubble or hummocking, the Ice Multiplier for the deformed ice must be decreased by 1.



Rough Ice

Subtract 1 from the Ice Multiplier

III. Ice Numerals

Vessel Classification

A ship is characterized by its “**Vessel Class**”. The class of the vessel reflects its structural strength, displacement, and power for breaking ice. The Vessel Class is determined by Transport Canada regulations based on the vessel’s characteristics.

The classes are designated as either “**Type**” vessels, which are designed for first-year sea ice, or “**CAC - Canadian Arctic Class**” vessels which are designed for more severe ice conditions.

Vessel Class	Maximum Allowable Ice Type	Ice Thickness (cm)
CAC1	No Limit	no limit
CAC2	Multi-year	no limit
CAC3	Second-year	no limit
CAC4	Thick First-year	> 120
Type A	Medium First-year	70-120
Type B	Thin First-year (stage 2)	50 - 70
Type C	Thin First-year (stage 1)	30 - 50
Type D	Grey-white	15 - 30
Type E	Open Water / Grey	10 - 15

↑
Increasing
ice
capability

Vessel Classification

Some examples of ice-capable vessels are shown below:



FEDERAL POLARIS

Fednav Ltd. Arctic cargo vessel



PIERRE RADISSON

Canadian Coast Guard Icebreaker

Ice Multipliers

Ice Multipliers (IM) are numbers that are used to indicate the severity of each Ice Type for the vessel. These numbers can be positive or negative. Positive numbers represent less risk to the vessel. Negative numbers represent more severe ice for the vessel.

Transport Canada regulations assign a unique set of Ice Multipliers to each Vessel Class.

It is important to understand that the basic Ice Multipliers for a vessel do not change. However, when appropriate, the Multipliers should be adjusted to account for decayed ice (less severe conditions) or rough ice (more severe conditions).

The Ice Multipliers are fundamental to the Arctic Ice Regime Shipping System because they are used to calculate the **Ice Numeral (IN)**, as shown on the opposite page.

Calculating the Ice Numeral

An **Ice Numeral (IN)** is calculated for each Ice Regime. Using arithmetic, the **Ice Multipliers (IM)** for the vessel and the **Ice Concentrations (C- in tenths)** of each ice type are combined in the following form:

$$\begin{array}{l}
 \text{multi-year (MY) ice} \longrightarrow \\
 \text{second-year (SY) ice} \longrightarrow \\
 \text{thick first-year (TFY) ice} \longrightarrow \\
 \text{medium first-year (MFY) ice} \longrightarrow \\
 \text{thin first-year (FY) ice} \longrightarrow \\
 \text{grey-white (GW) ice} \longrightarrow \\
 \text{grey (G) ice} \longrightarrow \\
 \text{new (N) ice} \longrightarrow \\
 \text{open water (OW) } \longrightarrow
 \end{array}
 \begin{array}{l}
 \\
 + \\
 + \\
 + \\
 + \\
 + \\
 + \\
 + \\
 +
 \end{array}
 \begin{array}{l}
 [C_{MY} \times IM_{MY}] \\
 [C_{SY} \times IM_{SY}] \\
 [C_{TFY} \times IM_{TFY}] \\
 [C_{MFY} \times IM_{MFY}] \\
 [C_{FY} \times IM_{FY}] \\
 [C_{GW} \times IM_{GW}] \\
 [C_G \times IM_G] \\
 [C_N \times IM_N] \\
 [C_{OW} \times IM_{OW}]
 \end{array}$$

IN = ?

The value of the Ice Numeral is used to determine if a vessel is allowed to enter the Ice Regime. If the Ice Numeral is **zero** or **positive**, the vessel is allowed to proceed. If the Ice Numeral is **negative**, the vessel should not proceed and an alternate route must be found.

Table of Ice Multipliers

The **Ice Multiplier Table** for AIRSS is given below for Type vessels and CAC4 and CAC3 vessels. There are no Ice Multipliers for CAC2 and CAC1 vessels.

Ice Multipliers for each Vessel Class

Ice Types	Type Vessels					CAC	
	E	D	C	B	A	4	3
MY Multi-Year Ice	-4	-4	-4	-4	-4	-3	-1
SY Second Year Ice	-4	-4	-4	-4	-3	-2	1
TFY Thick First Year Ice > 120 cm	-3	-3	-3	-2	-1	1	2
MFY Medium First Year Ice 70-120 cm	-2	-2	-2	-1	1	2	2
FY Thin First Year Ice							
stage 2 50-70 cm	-1	-1	-1	1	2	2	2
stage 1 30-50 cm	-1	-1	1	1	2	2	2
GW Grey-White Ice 15-30 cm	-1	1	1	1	2	2	2
G Grey Ice 10-15 cm	1	2	2	2	2	2	2
NI Nias, Ice Rind < 10 cm	2	2	2	2	2	2	2
N New Ice < 10 cm	"	"	"	"	"	"	"
Brash (ice fragments)	"	"	"	"	"	"	"
Bergy Water	"	"	"	"	"	"	"
Open Water	"	"	"	"	"	"	"

Ice Decay: If MY, SY, TFY or MFY ice has Thaw Holes or is Rotten, add 1 to the *IM* for that ice type.

Ice Roughness: If the total ice concentration is 6/10s or greater and more than one-third of an ice type is deformed, subtract 1 from the *IM* for the deformed ice type.

IV. Four Step Process: Summarized

How to Apply AIRSS

The Arctic Ice Regime Shipping System (AIRSS) can be applied using the four steps listed below, and as shown on the opposite page.

Step 1: Define the Ice Regime, based upon ice conditions

Ice regimes are characterized by their ice concentration and the types of ice in that Regime, including open water. Ice types are identified by their stage of development. Determine which types of ice are decayed or have surface roughness.

Step 2: Obtain Class-dependent Ice Multipliers (IM) and make any necessary adjustments

Obtain the Ice Multipliers for your Vessel Class, as established by Transport Canada. If any ice types are decayed or rough, make the appropriate adjustment to the Ice Multipliers for those ice types.


Step 3: Calculate the Ice Numeral (IN)

The Ice Numeral (IN) integrates information about the Ice Regime and the Vessel Class. For each Regime, an IN should be calculated by combining the concentration of each ice type (including open water) and the Class-dependent Ice Multiplier associated with each ice type. Calculate the Ice Numeral using the format given on page 29.

Step 4: Decide whether to proceed or to take an alternate route

After the Ice Numeral (IN) has been calculated, use it to decide whether to proceed into an Ice Regime or choose an alternate route. Use this criterion: If the IN is zero or positive, the ship may proceed with due diligence. If the IN is less than zero, the ship must find an alternate route.

How to Apply AIRSS

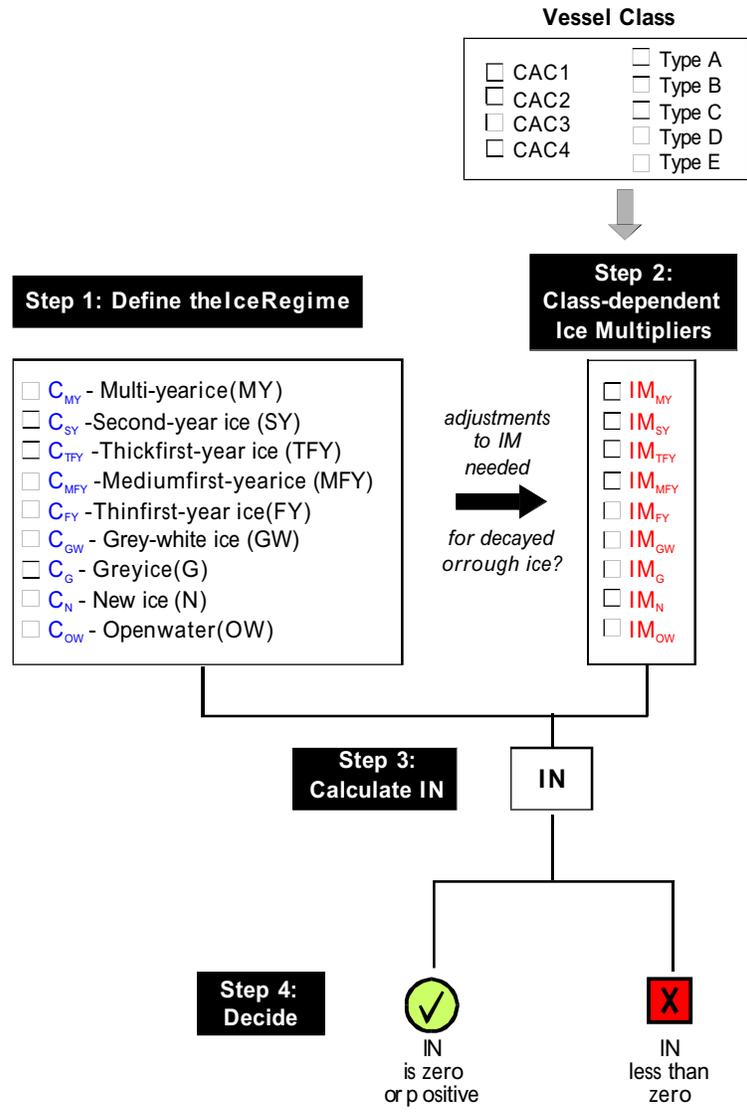

V. Detailed Examples for Each Vessel Class


Type E Vessels

The **Ice Multipliers (IM)** for Type E vessels are:

Multi-year →	IM_{MY}	-4
Second-year →	IM_{SY}	-4
Thick First-year →	IM_{TFY}	-3
Medium First-year →	IM_{MFY}	-2
Thin First-year (stage 2) →	IM_{FY}	-1
Thin First-year (stage 1) →	IM_{FY}	-1
Grey-white →	IM_{GW}	-1
Grey →	IM_G	1
New →	IM_N	2
Open Water →	IM_{OW}	2

Ice Decay: If MY,SY,TFY or MFY ice has **Thaw Holes** or is **Rotten**, add 1 to the **IM** for that ice type.

Ice Roughness: If the total ice concentration is 6/10 or greater and more than one-third of an ice type is deformed, subtract 1 from the **IM** for that rough ice.

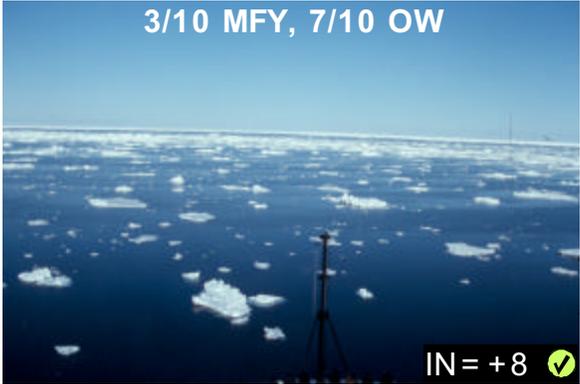

$$\begin{aligned}
 \mathbf{IN} &= [\mathbf{C}_{\mathbf{MFY}} \times \mathbf{IM}_{\mathbf{MFY}}] + [\mathbf{C}_{\mathbf{OW}} \times \mathbf{IM}_{\mathbf{OW}}] \\
 &= [3 \times -2] + [7 \times 2] \\
 &= +8
 \end{aligned}$$


Type E Vessels

4/10 TFY, 1/10 MFY, 5/10 OW



$$\begin{aligned} \text{IN} &= [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{MFY}} \times \text{IM}_{\text{MFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\ &= [4 \times -3] + [1 \times -2] + [5 \times 2] \\ &= -4 \end{aligned}$$

2/10 MY, 7/10 TFY, 1/10 OW

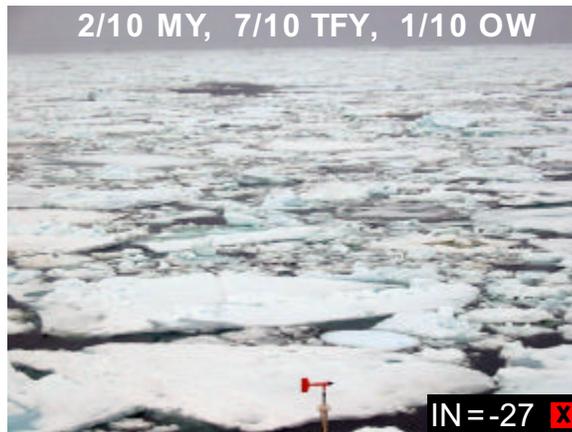

$$\begin{aligned} \text{IN} &= [C_{\text{MY}} \times \text{IM}_{\text{MY}}] + [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\ &= [2 \times -4] + [7 \times -3] + [1 \times 2] \\ &= -27 \end{aligned}$$

Type D Vessels

The **Ice Multipliers (IM)** for Type D vessels are:

Multi-year →	IM_{MY}	-4
Second-year →	IM_{SY}	-4
Thick First-year →	IM_{TFY}	-3
Medium First-year →	IM_{MFY}	-2
Thin First-year (stage 2) →	IM_{FY}	-1
Thin First-year (stage 1) →	IM_{FY}	-1
Grey-white →	IM_{GW}	1
Grey →	IM_G	2
New →	IM_N	2
Open Water →	IM_{OW}	2

Ice Decay: If MY,SY,TFY or MFY ice has **Thaw Holes** or is **Rotten**, add 1 to the **IM** for that ice type.

Ice Roughness: If the total ice concentration is 6/10 or greater and more than one-third of an ice type is deformed, subtract 1 from the **IM** for that rough ice.



$$\begin{aligned}
 IN &= [C_{MFY} \times IM_{MFY}] + [C_{OW} \times IM_{OW}] \\
 &= [3 \times -2] + [7 \times 2] \\
 &= +8
 \end{aligned}$$


Type D Vessels

4/10 TFY, 1/10 MFY, 5/10 OW



$$\begin{aligned}
 \mathbf{IN} &= [C_{TFY} \times \mathbf{IM}_{TFY}] + [C_{MFY} \times \mathbf{IM}_{MFY}] + [C_{OW} \times \mathbf{IM}_{OW}] \\
 &= [4 \times -3] + [1 \times -2] + [5 \times 2] \\
 &= -4
 \end{aligned}$$

2/10 MY, 7/10 TFY, 1/10 OW

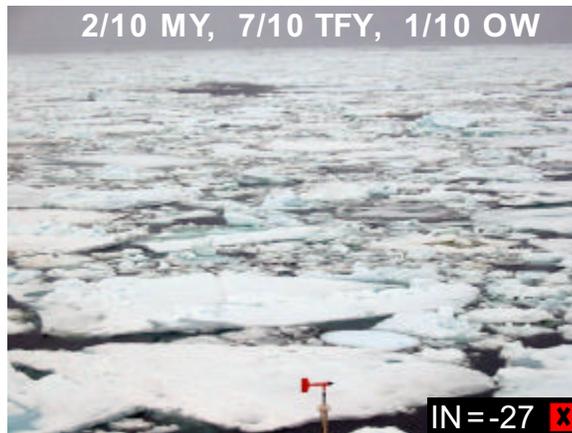

$$\begin{aligned}
 \mathbf{IN} &= [C_{MY} \times \mathbf{IM}_{MY}] + [C_{TFY} \times \mathbf{IM}_{TFY}] + [C_{OW} \times \mathbf{IM}_{OW}] \\
 &= [2 \times -4] + [7 \times -3] + [1 \times 2] \\
 &= -27
 \end{aligned}$$


Type C Vessels

The **Ice Multipliers (IM)** for Type C vessels are:

Multi-year →	IM_{MY}	-4
Second-year →	IM_{SY}	-4
Thick First-year →	IM_{TFY}	-3
Medium First-year →	IM_{MFY}	-2
Thin First-year (stage 2) →	IM_{FY}	-1
Thin First-year (stage 1) →	IM_{FY}	1
Grey-white →	IM_{GW}	1
Grey →	IM_G	2
New →	IM_N	2
Open Water →	IM_{OW}	2

Ice Decay: If MY,SY,TFY or MFY ice has **Thaw Holes** or is **Rotten**, add 1 to the **IM** for that ice type.

Ice Roughness: If the total ice concentration is 6/10 or greater and more than one-third of an ice type is deformed, subtract 1 from the **IM** for that rough ice.

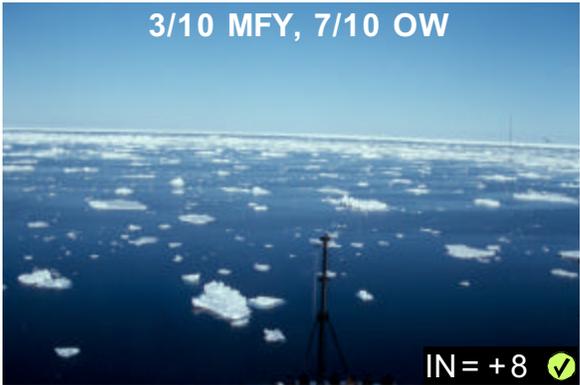

$$\begin{aligned}
 IN &= [C_{MFY} \times IM_{MFY}] + [C_{OW} \times IM_{OW}] \\
 &= [3 \times -2] + [7 \times 2] \\
 &= +8
 \end{aligned}$$


Type C Vessels

4/10 TFY, 1/10 MFY, 5/10 OW



$$\begin{aligned}
 \text{IN} &= [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{MFY}} \times \text{IM}_{\text{MFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\
 &= [4 \times -3] + [1 \times -2] + [5 \times 2] \\
 &= -4
 \end{aligned}$$

2/10 MY, 7/10 TFY, 1/10 OW

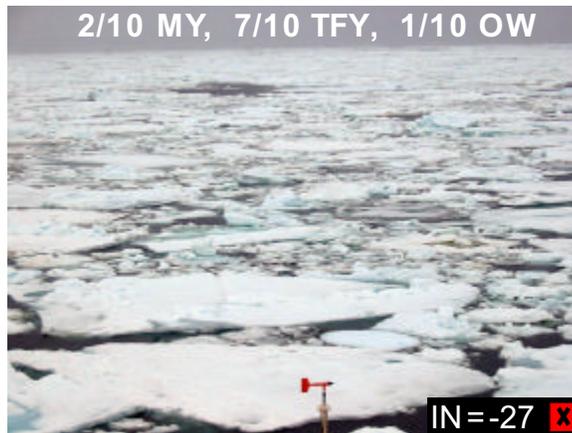

$$\begin{aligned}
 \text{IN} &= [C_{\text{MY}} \times \text{IM}_{\text{MY}}] + [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\
 &= [2 \times -4] + [7 \times -3] + [1 \times 2] \\
 &= -27
 \end{aligned}$$


Type B Vessels

The **Ice Multipliers (IM)** for Type B vessels are:

Multi-year →	IM_{MY}	-4
Second-year →	IM_{SY}	-4
Thick First-year →	IM_{TFY}	-2
Medium First-year →	IM_{MFY}	-1
Thin First-year (stage 2) →	IM_{FY}	1
Thin First-year (stage 1) →	IM_{FY}	1
Grey-white →	IM_{GW}	1
Grey →	IM_G	2
New →	IM_N	2
Open Water →	IM_{OW}	2

Ice Decay: If MY,SY,TFY or MFY ice has **Thaw Holes** or is **Rotten**, add 1 to the **IM** for that ice type.

Ice Roughness: If the total ice concentration is 6/10 or greater and more than one-third of an ice type is deformed, subtract 1 from the **IM** for that rough ice.

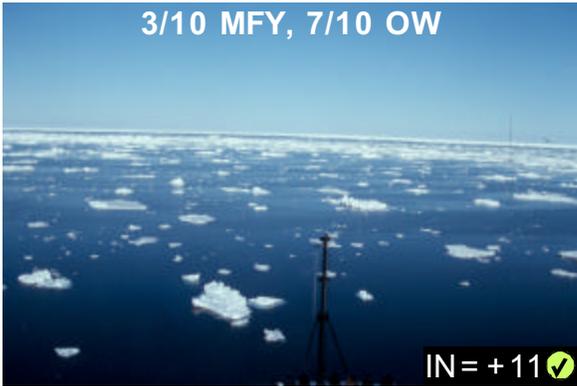

$$\begin{aligned}
 IN &= [C_{MFY} \times IM_{MFY}] + [C_{OW} \times IM_{OW}] \\
 &= [3 \times -1] + [7 \times 2] \\
 &= +11
 \end{aligned}$$

Type B Vessels


4/10 TFY, 1/10 MFY, 5/10 OW



IN = +1 ✓

$$\begin{aligned}
 \text{IN} &= [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{MFY}} \times \text{IM}_{\text{MFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\
 &= [4 \times -2] + [1 \times -1] + [5 \times 2] \\
 &= +1
 \end{aligned}$$

2/10 MY, 7/10 TFY, 1/10 OW

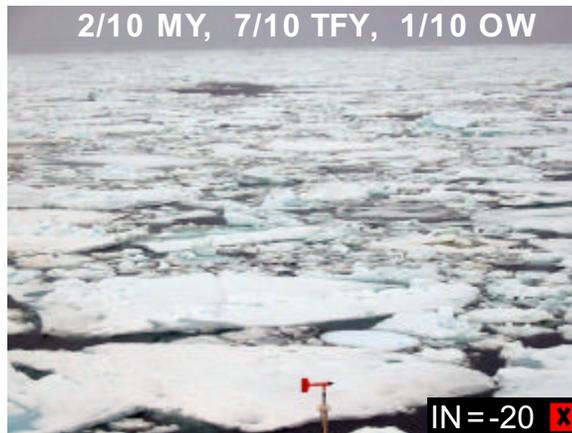

IN = -20 ✗

$$\begin{aligned}
 \text{IN} &= [C_{\text{MY}} \times \text{IM}_{\text{MY}}] + [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\
 &= [2 \times -4] + [7 \times -2] + [1 \times 2] \\
 &= -20
 \end{aligned}$$


Type A Vessels

The **Ice Multipliers (IM)** for Type A vessels are:

Multi-year →	IM_{MY}	-4
Second-year →	IM_{SY}	-3
Thick First-year →	IM_{TFY}	-1
Medium First-year →	IM_{MFY}	1
Thin First-year (stage 2) →	IM_{FY}	2
Thin First-year (stage 1) →	IM_{FY}	2
Grey-white →	IM_{GW}	2
Grey →	IM_G	2
New →	IM_N	2
Open Water →	IM_{OW}	2

Ice Decay: If MY, SY, TFY or MFY ice has **Thaw Holes** or is **Rotten**, add 1 to the **M** for that ice type.

Ice Roughness: If the total ice concentration is 6/10 or greater and more than one-third of an ice type is deformed, subtract 1 from the **IM** for that rough ice.

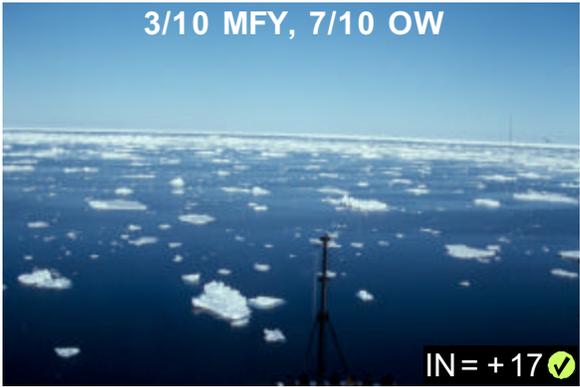

$$\begin{aligned}
 IN &= [C_{MFY} \times IM_{MFY}] + [C_{OW} \times IM_{OW}] \\
 &= [3 \times 1] + [7 \times 2] \\
 &= +17
 \end{aligned}$$

Type A Vessels


4/10 TFY, 1/10 MFY, 5/10 OW



IN = +7 ✓

$$\begin{aligned}
 \text{IN} &= [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{MFY}} \times \text{IM}_{\text{MFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\
 &= [4 \times -1] + [1 \times 1] + [5 \times 2] \\
 &= +7
 \end{aligned}$$

2/10 MY, 7/10 TFY, 1/10 OW

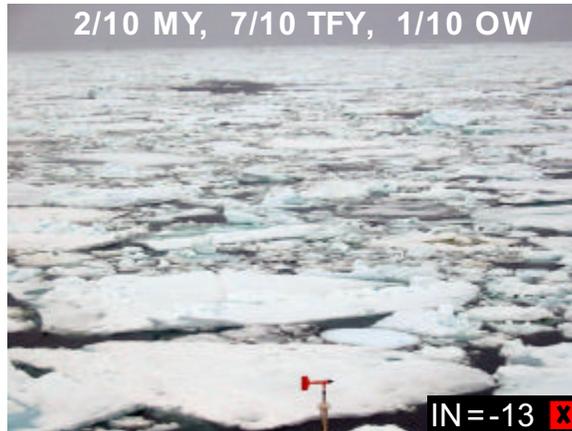

IN = -13 ✗

$$\begin{aligned}
 \text{IN} &= [C_{\text{MY}} \times \text{IM}_{\text{MY}}] + [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\
 &= [2 \times -4] + [7 \times -1] + [1 \times 2] \\
 &= -13
 \end{aligned}$$


CAC 4 Vessels

The **Ice Multipliers (IM)** for CAC 4 vessels are:

Multi-year →	IM_{MY}	-3
Second-year →	IM_{SY}	-2
Thick First-year →	IM_{TFY}	1
Medium First-year →	IM_{MFY}	2
Thin First-year (stage 2) →	IM_{FY}	2
Thin First-year (stage 1) →	IM_{FY}	2
Grey-white →	IM_{GW}	2
Grey →	IM_G	2
New →	IM_N	2
Open Water →	IM_{OW}	2

Ice Decay: If MY,SY,TFY or MFY ice has **Thaw Holes** or is **Rotten**, add 1 to the **IM** for that ice type.

Ice Roughness: If the total ice concentration is 6/10 or greater and more than one-third of an ice type is deformed, subtract 1 from the **IM** for that rough ice.

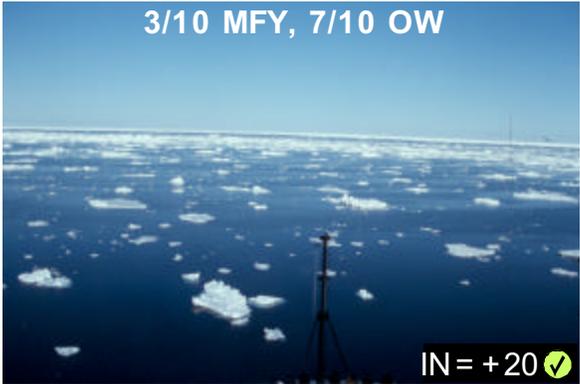

$$\begin{aligned}
 IN &= [C_{MFY} \times IM_{MFY}] + [C_{OW} \times IM_{OW}] \\
 &= [3 \times 2] + [7 \times 2] \\
 &= +20
 \end{aligned}$$

CAC 4 Vessels

4/10 TFY, 1/10 MFY, 5/10 OW



$$\begin{aligned} \text{IN} &= [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{MFY}} \times \text{IM}_{\text{MFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\ &= [4 \times 1] + [1 \times 2] + [5 \times 2] \\ &= +16 \end{aligned}$$

2/10 MY, 7/10 TFY, 1/10 OW



$$\begin{aligned} \text{IN} &= [C_{\text{MY}} \times \text{IM}_{\text{MY}}] + [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\ &= [2 \times -3] + [7 \times 1] + [1 \times 2] \\ &= +3 \end{aligned}$$


CAC 3 Vessels

The **Ice Multipliers (IM)** for CAC 3 vessels are:

Multi-year →	IM_{MY}	-1
Second-year →	IM_{SY}	1
Thick First-year →	IM_{TFY}	2
Medium First-year →	IM_{MFY}	2
Thin First-year (stage 2) →	IM_{FY}	2
Thin First-year (stage 1) →	IM_{FY}	2
Grey-white →	IM_{GW}	2
Grey →	IM_G	2
New →	IM_N	2
Open Water →	IM_{OW}	2

Ice Decay If MY, SY,TFY or MFY ice has **Thaw Holes** or is **Rotten**, add 1 to the **IM** for that ice type.

Ice Roughness If the total ice concentration is 6/10 or greater and more than one-third of an ice type is deformed, subtract 1 from the **IM** for the rough ice.

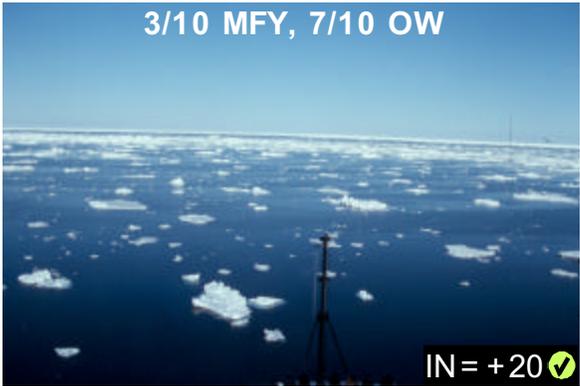

$$\begin{aligned}
 IN &= [C_{MFY} \times IM_{MFY}] + [C_{OW} \times IM_{OW}] \\
 &= [3 \times 2] + [7 \times 2] \\
 &= +20
 \end{aligned}$$


CAC 3 Vessels

4/10 TFY, 1/10 MFY, 5/10 OW



$$\begin{aligned} \text{IN} &= [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{MFY}} \times \text{IM}_{\text{MFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\ &= [4 \times 2] + [1 \times 2] + [5 \times 2] \\ &= +20 \end{aligned}$$

2/10 MY, 7/10 TFY, 1/10 OW

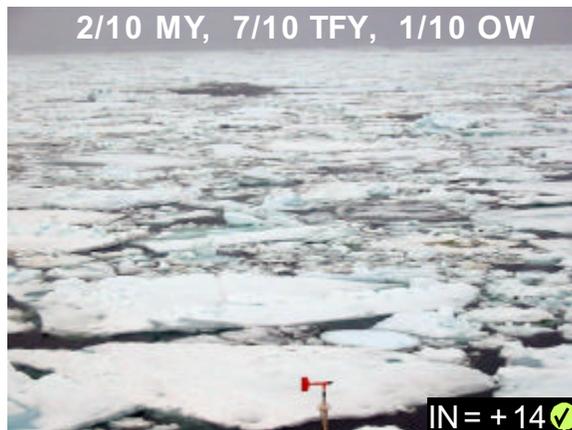

$$\begin{aligned} \text{IN} &= [C_{\text{MY}} \times \text{IM}_{\text{MY}}] + [C_{\text{TFY}} \times \text{IM}_{\text{TFY}}] + [C_{\text{OW}} \times \text{IM}_{\text{OW}}] \\ &= [2 \times -1] + [7 \times 2] + [1 \times 2] \\ &= +14 \end{aligned}$$

CAC2 and CAC1 Vessels

CAC2 and CAC1 vessels, which may be Icebreakers or cargo vessels, are designed for virtually all ice conditions in ice-covered waters. There are no Ice Multipliers for CAC2 and CAC1 vessels.

VI. Calculated Examples of IN for Each Vessel Class

Comparison of IN for Each Class



Vessel Class	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	-30	-30	-30	-20	-10	10	20
Decision	✘	✘	✘	✘	✘	✔	✔



Vessel Class	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	-40	-40	-40	-30	-20	0	10
Decision	✘	✘	✘	✘	✘	✔	✔

Comparison of IN for Each Class



Vessel Class	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	-7	-7	-7	2	20	29	29
Decision	✘	✘	✘	✔	✔	✔	✔



Vessel Class	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	2	2	14	14	20	20	20
Decision	✔	✔	✔	✔	✔	✔	✔

Comparison of IN for Each Class

1/10 MY, 6/10 TFY, 2/10 MFY, 1/10 OW



VesselClass	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	-24	-24	-24	-16	-6	9	17
Decision	✘	✘	✘	✘	✘	✔	✔

6/10 SY (Rotten), 3/10 TFY (Rotten),
1/10 OW



VesselClass	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	-22	-22	-22	-19	-10	2	23
Decision	✘	✘	✘	✘	✘	✔	✔

Comparison of IN for Each Class



Vessel Class	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	-5	-5	-5	0	5	15	20
Decision	✘	✘	✘	✔	✔	✔	✔



Vessel Class	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	-10	-10	-10	-4	8	14	14
Decision	✘	✘	✘	✘	✔	✔	✔

Comparison of IN for Each Class



Vessel Class	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	-26	-26	-26	-18	-10	7	17
Decision	✘	✘	✘	✘	✘	✔	✔



Vessel Class	Type E	Type D	Type C	Type B	Type A	CAC 4	CAC 3
Ice Numeral	0	0	0	4	8	16	20
Decision	✔	✔	✔	✔	✔	✔	✔

Further Information

The Canadian Hydraulics Centre is working with Transport Canada, the Canadian Coast Guard, and Ship Owners & Operators to ensure that the Ice Regime System has a solid scientific basis. Work in this area is ongoing.

Additional information on AIRSS can be found in the following publications:

AIRSS 1996. *Arctic Ice Regime Shipping System (AIRSS) Standards*. Transport Canada Report TP 12259E, Ottawa. Ont., Canada.

Arctic Waters Pollution Prevention Act, and Regulations.

ASPPR, 1989. *Proposals for the Revision of the Arctic Shipping Pollution Prevention Regulations*. Transport Canada Report TP9981, Ottawa. Ont., Canada.

Timco, G.W. and Kubat, I. 2002. *Scientific Basis for the Ice Regime System: Discussion Paper*. CHC Report CHC-TR-002, Transport Canada Report TP 13916E, Ottawa, Ont., Canada.

Timco, G.W. and Johnston, M. 2003. *Ice Decay Boundaries for the Ice Regime System*, CHC Report CHC-TR-009, Ottawa, Ont., Canada.

User Assistance Package for the Implementation of AIRSS. Transport Canada Report TP 12819, Ottawa, Ont., Canada.



For additional information about operations in Canadian Arctic waters, please contact:

Mr. Peter Timonin, P.Eng.
Regional Director, Marine
Prairie and Northern Region - Marine
Transport Canada
344 Edmonton St., PO Box 8550
Winnipeg, Manitoba, R3C 0P6
Canada
e-mail timonip@tc.gc.ca

For additional information about Canadian ice-covered waters regulatory development and related R&D, please contact:

Mr. V.M. Santos-Pedro, P.Eng.
Director, Construction and Equipment Standards
Marine Safety
Transport Canada
330 Sparks St.
Ottawa, Ontario, K1A 0N8
Canada
e-mail santosv@tc.gc.ca

For additional information on the scientific basis for the Ice Regime System, please contact:

Dr. G.W. Timco
Canadian Hydraulics Centre
National Research Council of Canada
Ottawa, Ontario, K1A 0R6
Canada
e-mail garry.timco@nrc-cnrc.gc.ca

